

SOCIETÀ COOPERATIVA
BILANCIAI



Double weighing



Appendix to advanced user manual

Index

1. OVERALL VIEW OF THE MENU TREE	B-5
1.1 Setup Menu / Personalizations / Operating modes / Operation / Double weighing	B-5
1.2 Setup Menu / Personalizations / Operating modes / Printer /... ..	B-8
1.3 Setup Menu / Personalizations / Operating modes / Printer / Prints	B-8
1.4 Setup Menu / Personalizations / Files	B-12

1. OVERALL VIEW OF THE MENU TREE

The menu tree expanded to the 5th level is reported below.

This appendix only gives details about the double weighing procedures.

Personalizations

- Operating modes

 - Operation

 - Single weighing

 - Double weighing

 - Data recall

 - Preset weights

 - Printer

 - Model

 - ...

 - Port

 - ...

 - Prints

 - Standard

 - Personalized

- Files

 - Memory status

 - File status

 - Product Code

 - Product Code Total

 - Client Code

 - Client Total

 - RCD

 - RCD Plate

 - RCPD

 - RCPD Plate

 - RCPD Total

 - Plate Total

 - Zero-settings

 - Product Code

 - General Total

 - Partial Total

 - Product Code Total

 - Client Code

 - Client Code Total

 - RCD

 - RCD Plate

 - RCPD

 - RCPD Plate

 - RCPD Total

 - Plate Total

 - Reset all

1.1 Setup Menu / Personalizations / Operating modes / Operation / Double weighing

Data Recall	Disabled
	Disables the entry-exit options with data recall. Selecting this option enables you to enter the first weight manually. The key on the tool bar will be <i>WEIG.R</i> .
	RCD
	Enables the entry-exit options with data recall in the numerical format (4 figures). Once enabled, an RCD archive must be created. To do this, follow the procedure explained in the Personalization chapter of the advanced user manual. The <i>RCD</i> item will automatically appear in the shortcut key bar and in the user menu.
	RCD Plate with print
	Enables the entry-exit options with data recall in the licence plate format (10 characters) with the entry print out enabled. Once enabled, the RCD Plate archive must be created. To do this, follow the procedure explained in the Personalization chapter of the advanced user manual. The <i>PLATE</i> item will automatically appear in the shortcut key bar and in the user manual. Enabling this option means that a general item named Plate (10 characters) with no associated data cannot be used.

	RCD Plate without print
	As above but without the printout.
Preset weights	Disabled
	Disables the preset weight option.
	RCPD
	Enables the preset weight options with data recall in the numerical format (4 figures). Once enabled, an RCPD Code archive must be created. To do this, follow the procedure explained in the Personalization chapter of the advanced user manual. The <i>RCPD</i> item will automatically appear in the shortcut key bar and in the user menu.
	RCPD Plate
	Enables the preset weight options with data recall in the licence plate format (10 characters). Once enabled, an RCPD Plate Code archive must be created. To do this, follow the procedure explained in the Personalization chapter of the advanced user manual. The <i>PPLATE</i> item will appear in the shortcut key bar and in the user manual. Enabling this option means that a general item of data named Plate (10 characters) with no associated data cannot be used.

1.2 Setup Menu / Personalizations / Operating modes / Printer /...

Consult the Personalization chapter of the advanced user manual for the Model and Port sub-menus.

1.3 Setup Menu / Personalizations / Operating modes / Printer / Prints

Standard	Print gross
	Select YES to enable the gross weight print-out, otherwise select NO .
	Print Tare The tare printout can be enabled. If you select: ✓ preset the tare will only be printed if preset; ✓ other than 0 the tare will only be printed if other than zero; ✓ always tare printed in any case.

Print barcode

If the **single weighing** mode has been selected, select **NO** to disable the barcode printout otherwise choose one of the following, depending on the barcode printout required:

- ✓ **Net**
- ✓ **Product Code + Net (code 128)**
- ✓ **Product Code + Net (indicode 13)**
- ✓ **Generic Code + Net**

If the **double weighing** mode has been selected, select **YES** to print out the barcode **in the first** weighing operation (first weight), otherwise select **NO**. For the exit operation, select **NO** to disable the barcode printout otherwise choose one of the following, depending on the barcode printout required:

- ✓ **Weighing net (code 128)**
- ✓ **Product Code + Weighing net (code 128)**
- ✓ **Product Code + Weighing net (indicode 13)**
- ✓ **Client code + Weighing net**

	<p>If the double weighing option is handled by means of preset weights, select the option In preset weights then select NO to disable the barcode printout otherwise choose one of the following, depending on the barcode printout required:</p> <ul style="list-style-type: none"> ✓ Weighing net (code 128) ✓ Product code + Weighing net (code 128) ✓ Product code + Weighing net (indicode 13) ✓ Client code + Weighing net <p>Print date time</p> <p>To printout the date and time on the print sheet select YES, otherwise select NO.</p> <p>N. of copies weight print</p> <p>Determines the number of copies that are automatically printed (this only applies to STB112 and DPT282). Enter the numerical value as explained in the Use of the Terminal chapter of the user manual.</p> <p>Print logo</p> <p>To print out a logo select YES, otherwise select NO.</p>
Personalized	<p>Displays and enables customised printouts and/or strings in the memory that have been entered into the machine.</p>


1.4 Setup Menu / Personalizations / Files

Consult the Personalization chapter of the advanced user manual for instructions about Archive management (creation, resizing, zeroing, etc.).

Remember that the number and function of the archives depend on the type of operation selected.

In the double weighing mode, you can create archives (RCD, RCD Plate, RCPD, RCPD Plate, etc.) that are not mentioned in the Personalization chapter of the advanced user manual.

Consult the menu tree in *chap. 1. on page B-5* of this appendix for a complete list of the Archives used in the double weighing mode.

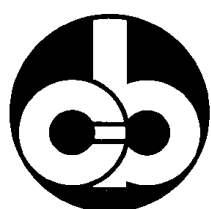

**SOCIETÀ COOPERATIVA
BILANCIAI**

SOC. COOP. BILANCIAI CAMPOGALLIANO A.R.L.

41011 Campogalliano (MO) Via Ferrari, 16

tel. +39 (0)59 893 611 - fax +39 (0)59 527 079

home page: <http://www.coopbilanciai.it>

E-mail: cb@coopbilanciai.it

**servizio post-vendita
Nachverkaufs-Service**

**after sales service
servicio post-venta**

**service apres-vente
serviço pós-venda**

tel. +39 (0)59 893 612 - fax +39 (0)59 527 294
